

INSTALLATION INSTRUCTIONS

SL-1047X Series

LED directional warning light

sentinel
vehicle lighting

Mounting: Surface mount

Wiring: Positive - Red
Chassis ground - Black
Flash pattern & synchronisation - Green
Alternate flash - White



To select flash pattern: Momentarily apply positive (red) wire to green wire once for next pattern in the sequence. Touch and hold for 5 seconds to reset to FP#1 (Double flash R65 Class 1).

Synchronous flash: Once the lights are set to the same flash pattern, connect the green wires together.

Alternate flash: Once the lights are set to the same flash pattern, connect the green wires together. Then connect the white wire from one of the lights to positive (red).

Synchronise multiple lights: Connect all the green wires together.

Alternate groups of lights: Connect all the green wires together and then connect the white wires to positive (red) from the lights you wish to alternate.

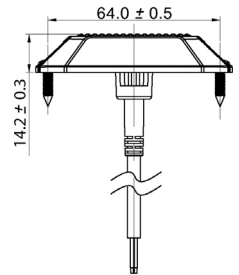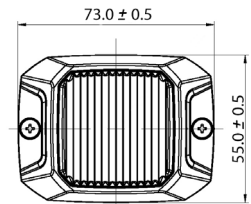

Pattern	Flash Mode	Rate
1	Double Flash, ECE R65 Class 1	125FPM
2	Single Flash, ECE R65 Class 1	125FPM
3	Single Flash, California Title 13	75FPM
4	Triple Flash	125FPM
5	Quadruple Flash	125FPM
6	Quintuple Flash	125FPM
7	Combination Single/Double Flash	
8	Combination Single/Triple Flash	
9	Combination Single/Quintuple Flash	
10	Strobe	
11	Cruise (30% brightness by day)	